

Mac


“GoTouch make the world more interactive with visual communication”


2018.04



1. Run the GoTouch program.
2. Turn on Bluetooth on your Mac.
3. Click the Bluetooth icon on the right side menu.



1. Clicking on the Bluetooth icon will automatically detect and try to connect to the nearby GoTouch device
2. Check to see if you are connected.
3. If not, try again.

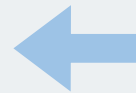


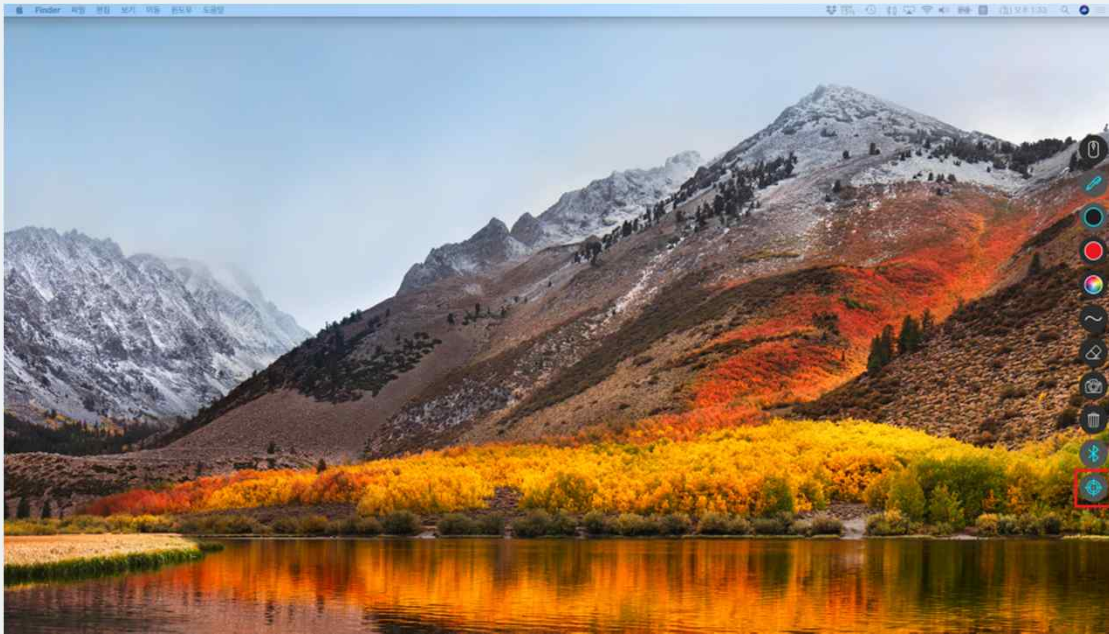

1. Click the Calibrate icon at the bottom of the right menu icon.



1. Touch the gray circle in the center of the screen with the GoTouch pen.
2. Move the touch device so the blue circle is inside the gray circle.
3. When the blue circle is inside the gray circle, release the high-touch pen from the screen.

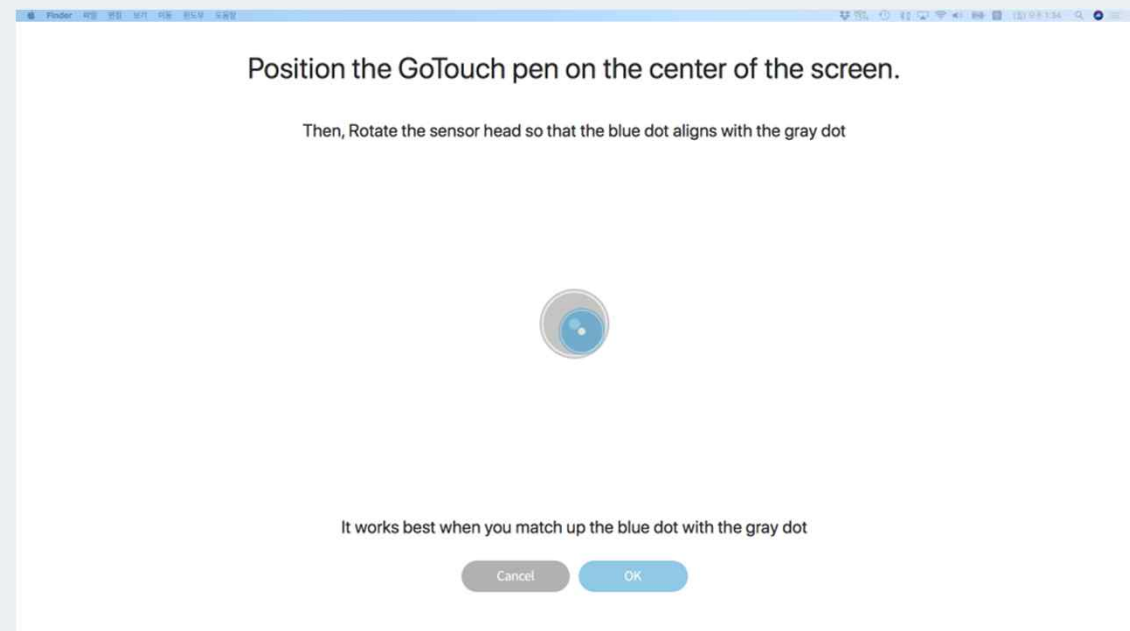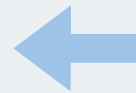

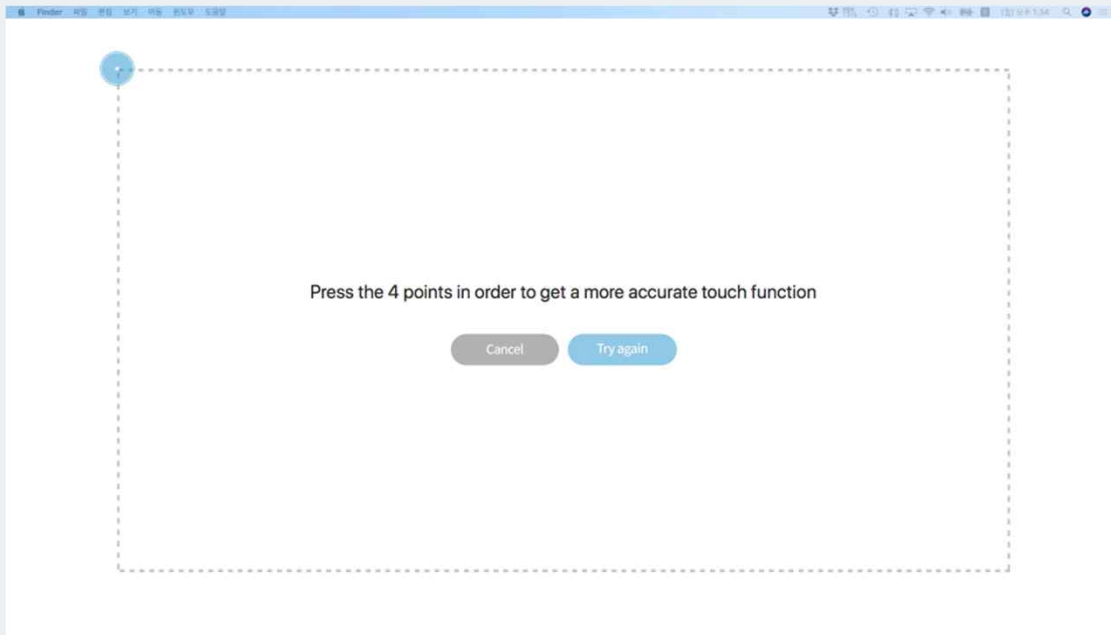

1. Take a blue circle center with a GoTouch pen.
2. Take the remaining 3 blue circle centers with a GoTouch pen


1. You can select the pen thickness by clicking the thickness selection button on the right side menu.

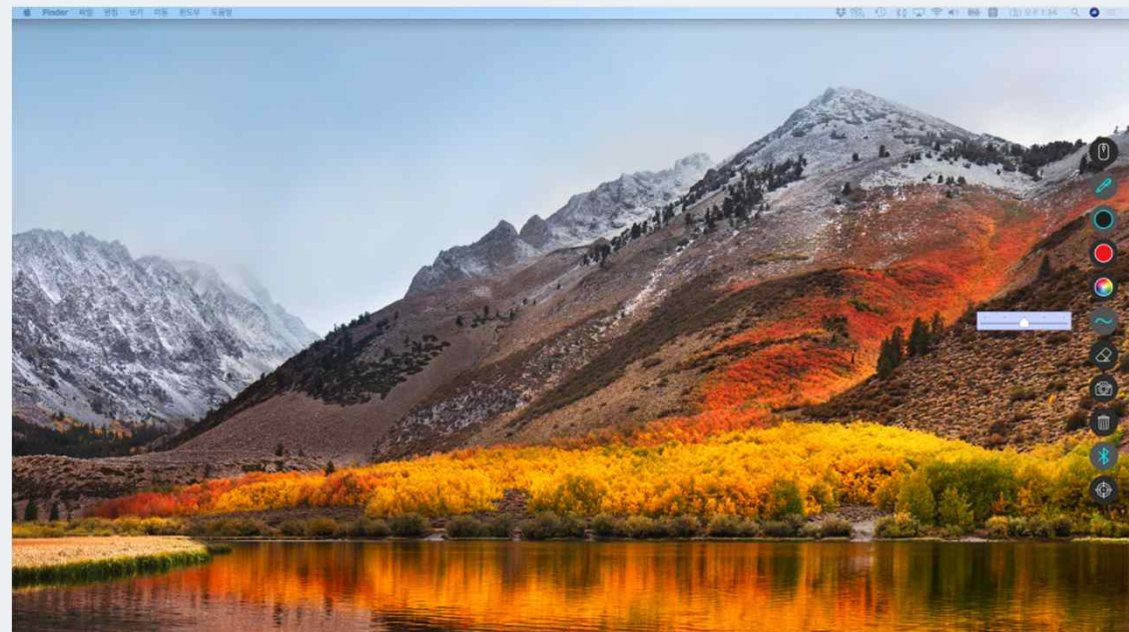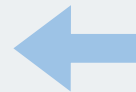




1. You can select a color by clicking the color selection button in the right menu.

1. Click the Draw button in the right menu.
2. You can write with a GoTouch pen.

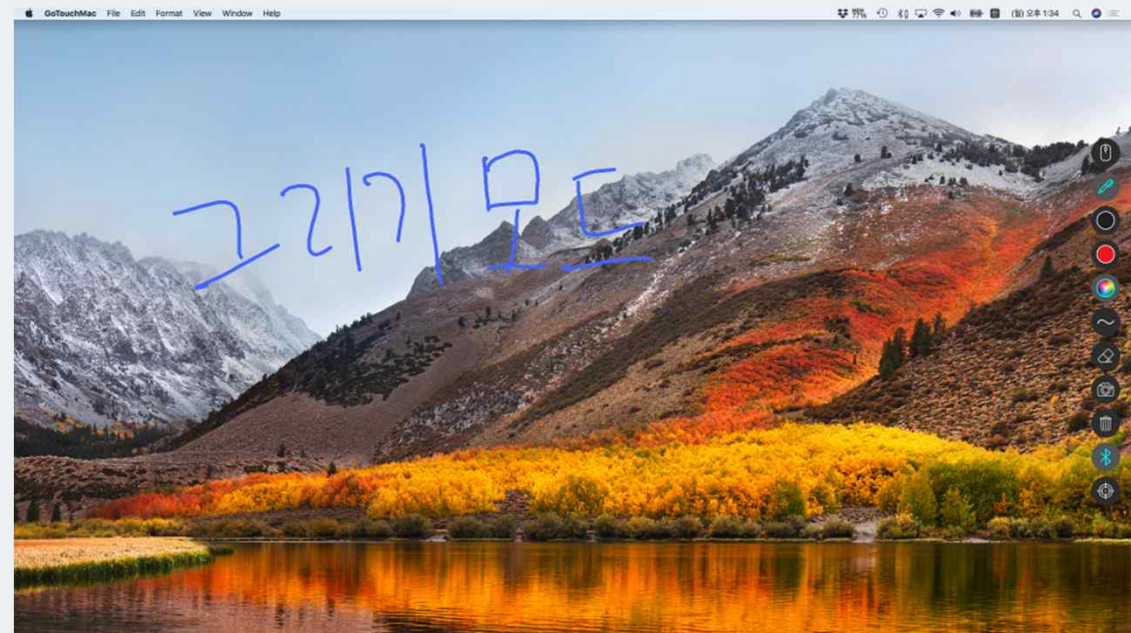

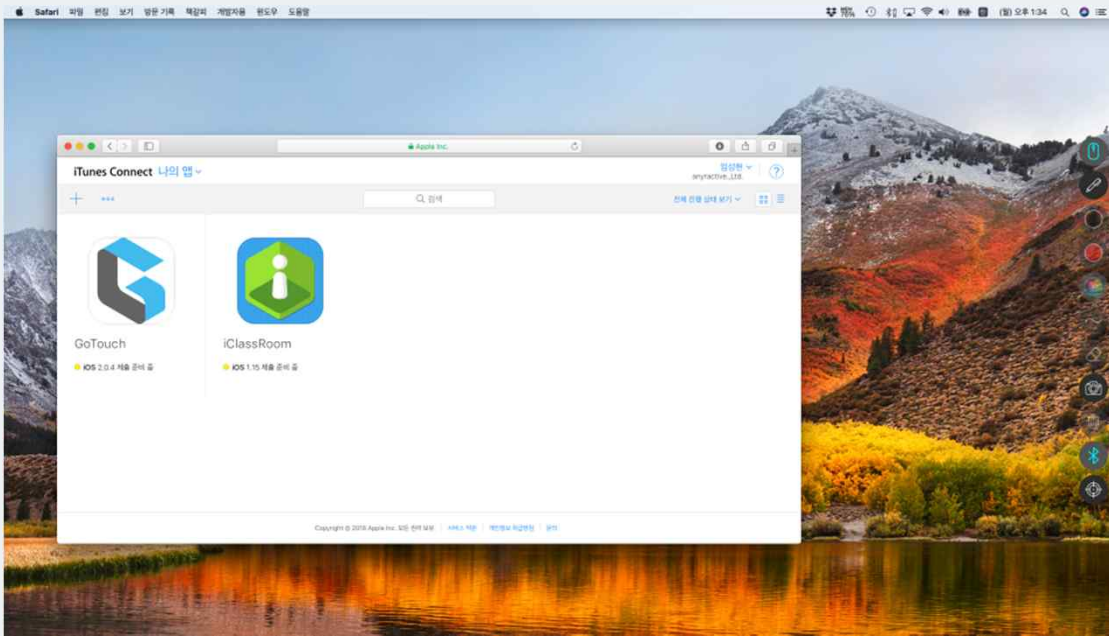

1. Click the right mouse button.
2. GoTouch pen allows you to use the pen mouse function.

Thank you.

ANYRACTIVE



Address. 8F , No.809 , SeoulStartupHub , 21 , Baekbeom-ro 31-gil , Mapo-gu , Seoul , Korea



Tel. +82.2.308.0006



Fax. +82.2.6455.1653



Email. help@anyractive.co.kr



Website. www.mygotouch.com